

# ELECTRIC HOT BOX

Includes: 8 Sheet Pans



## INSTRUCTIONS

---

### STEP 1

Plug unit into **GROUND**ED outlet.

### STEP 2

Press **RED** power button on upper left corner of the unit. It will illuminate when on.

### STEP 3

Push in temperature dial on digital display. Rotate dial to desired temperature (between 140-220°F) and push in temperature dial again to set.

### STEP 4

Temperature will show on digital display when the unit reaches its desired temperature.

### AFTER HOURS:

Contact your local branch.

---



### WARNING

Plug the hot box directly into a wall outlet without using an extension cord and without other items plugged into the same outlet. Failure to do this will cause the hot box to function below expectation and can be dangerous.

### NOTE

To keep food from drying out, add a pan of water to the bottom of the unit.

Proper food holding temperature is typically 140°F or higher for most food.